



Voge 300 Rally Euro5 Plus CAN installation

The Voge 300 rally euro 5 plus requires the connection of the CAN High and CAN Low cables for the OBD2 connection.

We located the motorcycle's OBD2 connector again and attached a wire tap to the GREEN-BLUE wire:

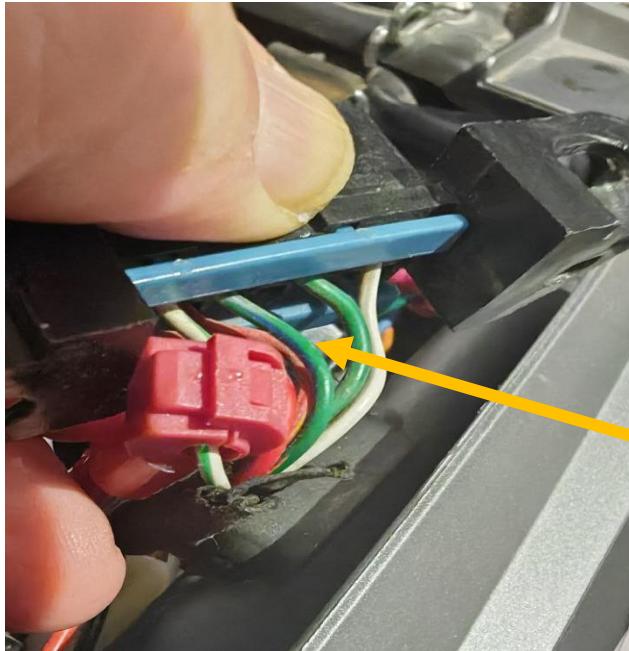

and another on the RED-YELLOW cable:

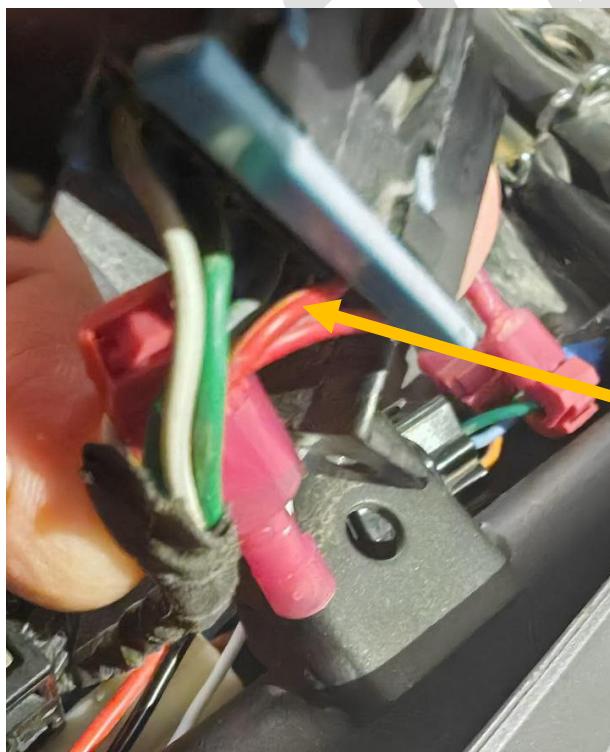

We take the GREEN SuperFlow wire and connect it to the wire tap that's on the RED-YELLOW OBD2 wire.

Next, we take the BLUE wire from the SuperFlow and connect it to the wire tap that is on the GREEN-BLUE wire of the OBD2.

Organize the cables properly and verify the correct operation of OBD2 using the SuperFlow app.

JC RACING